

## Core

LOOP 3D Core holds the controller board and the motor drivers of LOOP PRO X 3D printer inside.

From heating to cooling, positioning to filament extrusion, every motion is controlled by this box.





